



# Over-row sprayer Type EL

## With linear offset

A new addition to the freilauber over-row sprayers are the modular construction tangential fans for more power and service life. The blowers always spray outwards. Only on border rows do they spray inwards. In conjunction with Lechler ID 90-015 nozzles, approximately 90% reduction in drift can be achieved.

It is fitted to the tractor's three-point mounting and firmly tensioned using a hydraulic tensioner. The trailer's driving performance is not affected in any way. Improved traction and a smoother ride are achieved by additional load on the tractor's rear axle.

The sprayer features support feet with castors so that it can easily be uncoupled. The trailer remains attached to the sprayer.



For further information visit  
[www.freilauber.de](http://www.freilauber.de) or just scan  
the QR-Code.

From your authorised dealer

# Over-row sprayer Type EL


## The sprayer trailer you can depend on

### Standard equipment and extras

- Joystick control for individual, joint or parallel offsetting of the blowers with lifting cylinders, as well as the trailer's sections and pressure setting
- Joystick control for hydraulic and pesticide central valves including trailer/sprayer
- Only one control unit required
- Parallel blower offset to the hill-facing side when turning on a slope
- Fan frame fitted with collision protection
- Galvanised framework
- Support feet with castors
- Blowers feature two integrated oil coolers
- Startup protection for fans
- Pendulum and roll dampers
- Hydraulic three-point tensioning

### Optional

- Electrically rotating blowers for even less drift
- Also available in bonnet-mounted design Technical data
- Blower length 1.50m
- Working width blower centre/blower centre 4.0m (extended 4.90m)
- Transport width 2.05m (extended 2.40m)
- Required oil quantity approx. 20 litres/min
- Required drive performance approx. 3 kW
- Weight approx. 300kg (extended approx. 3.50m)

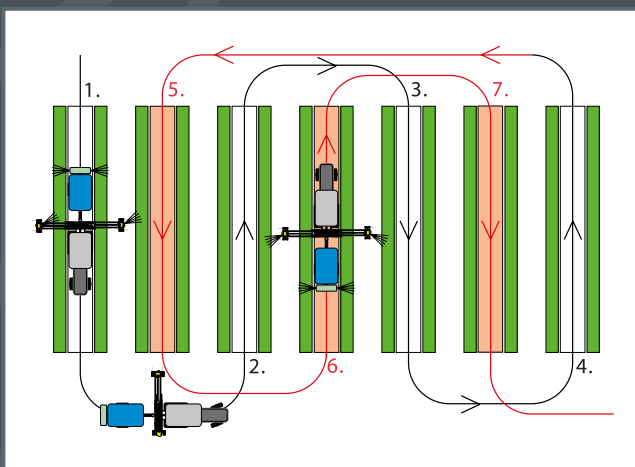

### Treatment scheme

- If treating from one side: only the light-coloured driving lanes (every 4th lane)
- If treating from both sides: the dark-coloured driving lanes as well (every 2nd lane)
- The blowers always spray outwards. Only on border rows do they spray inwards.